

Demo Mode Set-up Guide



BOSCH
Invented for life





Demo settings – your on-site sales support. The right appliance presentation is the main element in the customer’s decision making. Live product demonstrations are a highly effective way to explain product benefits. To support live product presentations, many Bosch appliances feature a demo mode that allows customers to familiarize themselves with the functionality of our products without the aid of a salesperson.

On the following pages you will find the demo mode instructions for:

Dishwashers	4	Slide-in Ranges	14
Electric Cooktops	10	Drawer Microwave	15
Wall Ovens	12	Refrigeration	16
Steam Convection Oven	13		

Dishwasher Demo Mode Instructions

Benchmark™ Series Models - Electrical Demo Mode (no electrical & water demo mode available)

Preparing for Demo Mode:

1. Plug dishwasher into outlet. Do NOT attach water inlet hose or disconnect any components, including the drain pump. Drain pump can be plugged-up with a stopper, though not required for demo mode.

To Enter Demo Mode:



Note: Controls use a unique Piezo technology that allows them to be highly sensitive and react immediately to even slight pressure. When instructed, buttons must be pressed or released in unison to ensure demo mode is activated. If directions say to hold down button(s) and then push others, the original button(s) must be held firmly without break.

1. Begin with the dishwasher OFF. If wash cycle has been started accidentally, please press: OFF – ON – OFF.
2. Open the door. Press and hold any two program buttons (buttons 1-6).
3. Press the **A On/Off button** to turn the dishwasher ON and release the two program buttons.
4. Press the **B 5 button** as many times as necessary to display the code: **P 7**.
5. Press the **C 6 button** to confirm this choice and initiate demo mode.
6. Close the door. Dishwasher will now be in demo mode.

During Demo Mode:

1. The display will always show: **1:23** and the **Normal Wash** LED will be illuminated. If any program button is pressed, its corresponding LED will illuminate.
2. To demonstrate what the display will look like at the end of a cycle, hold down the **D Start/Reset button**. The display will then show: **0:01** and the **Normal Wash** LED will go OFF.
3. After turning the dishwasher OFF and then back ON, demo mode will continue as described in 1.

Note: Rinse Aid and Salt LEDs will remain ON if you do not add Rinse Aid or Salt. This will not affect demo mode.

To Exit Demo Mode:

1. Hold down the **D Start/Reset button** for 3 seconds. The display will show: **0:01**.
2. Press any **A** program buttons (buttons 1-6). The display will flash **0:01**.
3. Press the **A On/Off button** to turn the power OFF within 10 seconds.
4. Press the **A On/Off button** to turn the power back ON. Dishwasher will no longer be in demo mode.

Models:

SH_9PT_UC
SH_8PT_UC

Dishwasher Demo Mode Instructions

800 Plus, 800, 500 and 300 Series - Electrical Demo Mode (no electrical & water demo mode available)

Preparing for Demo Mode:

1. Plug dishwasher into outlet. Do NOT attach water inlet hose or disconnect any components, including the drain pump. Drain pump can be plugged-up with a stopper, though not required for demo mode.

To Enter Demo Mode:



1. Begin with the dishwasher turned OFF.
2. With the door open. Press and hold down the **B button** and **C button** in unison.
3. While holding **buttons B and C** press the **On/Off button** once to turn the dishwasher ON. Then release **buttons B and C**.
4. Press the **B button** as many times as necessary to display code: **P 7**.
5. Press the **C button** to confirm this choice and to start the demo mode.
6. Close the door. Dishwasher will now be in demo mode.

During Demo Mode:

1. The display will always show **1:23** and the **Normal Wash** or **Auto Wash** LED will be illuminated.
2. If any program button is pressed, its corresponding LED will illuminate as long as button is pressed.
3. After turning the dishwasher OFF and then back ON, demo mode will continue.
4. Also, you can open and close the door anytime in demo mode.

Note: Rinse Aid and Salt LEDs will remain ON if you do not add Rinse Aid or Salt. This will not affect demo mode.

To Exit Demo Mode:

1. Begin with dishwasher ON: Top control door has to stay opened, and front control door has to stay closed.
2. Press **Start** for 3 seconds. The display will then show **0:01** and the **Normal Wash** or **Auto Wash** LED will turn off.
3. Press **buttons B and C** simultaneously once. The display will flash **0:01**.
4. Press the **On/Off button** to turn the power OFF within 10 seconds.
5. Press the **On/Off button** to turn the power back on. Dishwasher will no longer be in demo mode.

Models:

SH_7PT_UC SH_65T_UC
SH_68T_UC SH_53T_UC

Dishwasher Demo Mode Instructions

Ascenta® Series Models – Front Controls with No Display Electrical and Water Demo Mode


Preparing for Demo Mode:

1. Plug dishwasher into outlet. Do NOT attach water inlet hose or disconnect any components, including the drain pump. Drain pump can be plugged-up with a stopper, though not required for demo mode.
2. Fill dishwasher by hand with approximately one gallon of water and a ½ capful of an antibacterial agent. (Example: Bacteriostat [used for humidifiers]. Do not use bactericide or bleach).
3. Close door.

Note: If the dishwasher is filled with too much water, the water safety system will activate and drain the water until the dishwasher is empty.



To Enter Demo Mode:

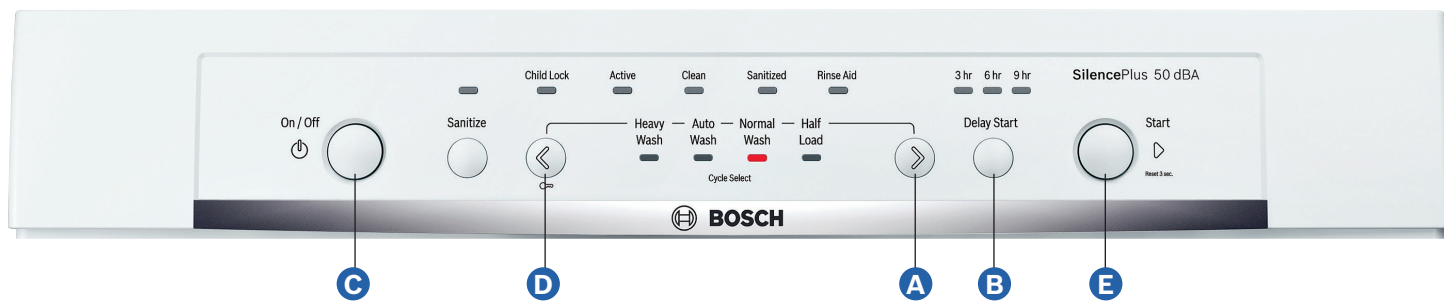

1. Begin with the dishwasher turned OFF.
2. While holding down the **A** button and the **B** Delay button at the same time press the **C** On/Off button to turn the power ON. One of the wash cycle LEDs is going to flash:
3. Press the **D** button until all wash cycle LEDs are lit:
4. Press the **A** button to confirm this choice and initiate demo mode. Dishwasher will now be in demo mode.

During Demo Mode:

1. While in demo mode, the **Active** and **Normal** LED will be illuminated.
2. To demonstrate what the display will look like at the end of a cycle, hold down the **E** Start/Reset button.

The **Clean** LED will then be illuminated and the **Normal Wash** LED will go off.

3. After turning the dishwasher OFF and then back ON, demo mode will continue as described in 1.

Note: Rinse Aid LED will remain ON if you do not add Rinse Aid. This will not affect demo mode.

To Exit Demo Mode:

1. Hold down the **E** Start/Reset button for 3 seconds. The **Normal Wash** LED will go OFF and the **Clean** LED will be illuminated.
2. Press the **A** button and the **B** Delay button at the same time. The **Clean** LED will now go OFF.
3. Within 10 seconds, press the **On/Off** button to turn the power OFF.
4. Press the **C** On/Off button to turn the power back ON. Dishwasher will no longer be in demo mode.
5. Remove water from dishwasher tub with a wet-vac.

Models:	SHE3AR5_UC
	SHE3ARL_UC

Dishwasher Demo Mode Instructions

Ascenta® Series Models – Front Controls with Display Electrical and Water Demo Mode

Preparing for Demo Mode:

1. Plug dishwasher into outlet. Do NOT attach water inlet hose or disconnect any components, including the drain pump. Drain pump can be plugged-up with a stopper, though not required for demo mode.
2. Fill dishwasher by hand with approximately one gallon of water and a ½ capful of an antibacterial agent. (Example: Bacteriostat [used for humidifiers]. Do not use bactericide or bleach).
3. Close door.

Note: If the dishwasher is filled with too much water, the water safety system will activate and drain the water until the dishwasher is empty.

To Enter Demo Mode:



1. Begin with the dishwasher turned OFF. If wash cycle has been started accidentally please press: OFF – ON – OFF
2. While holding down the **A** button and the **B** Delay button at the same time, then press the **C** On/Off button to turn the power ON. The display will show: **P 0**
3. Press the **D** button until the display shows: **P 7**
4. Press the **A** button to confirm this choice and initiate demo mode.

During Demo Mode:

1. The display will always show: **1:23** and the **Normal Wash** LED will be illuminated when the **Sanitize** button is pressed, its corresponding LED will illuminate.
2. To demonstrate what the display will look like at the end of a cycle, hold down the **E** Start/Reset button.

The display will show **0:01** and the **Normal Wash** LED will go OFF.

3. After turning the dishwasher OFF and then back ON, demo mode will continue as described in 1.

Note: Rinse Aid LED will remain illuminated if rinse aid is not added. This will not affect the demo mode.

To Exit Demo Mode:

1. Hold down the **E** Start/Reset button for 3 seconds. The display will show: **0:01**
2. Press the **A** button and the **B** Delay Start button at the same time. The display will show: **0:01**
3. Within 10 seconds, press the **C** On/Off button to turn the power OFF.
4. Press the **C** On/Off button to turn the power back ON. Dishwasher will no longer be in demo mode.
5. Remove water from dishwasher tub with a wet-vac.

Models:	SHE3AR7_UC
	SHE3ARF_UC

Dishwasher Demo Mode Instructions

Ascenta® Series Models – Top Controls with No Display Electrical and Water Demo Mode


Preparing for Demo Mode:

1. Plug dishwasher into outlet. Do NOT attach water inlet hose or disconnect any components, including the drain pump. Drain pump can be plugged-up with a stopper, though not required for demo mode.
2. Fill dishwasher by hand with approximately one gallon of water and a ½ capful of an antibacterial agent. (Example: Bacteriostat [used for humidifiers]. Do not use bactericide or bleach).
3. Close door.

Note: If the dishwasher is filled with too much water, the water safety system will activate and drain the water until the dishwasher is empty.



To Enter Demo Mode:

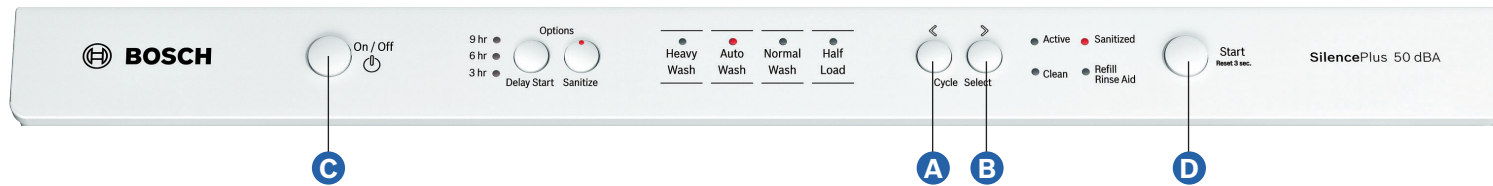

1. Begin with the dishwasher turned OFF. If wash cycle has been started accidentally please press: OFF – ON – OFF.
2. With the door open, hold down the **A** button and the **B** button at the same time and then press the **C** On/Off button to turn the power ON. One of the wash cycle LEDs is going to flash: ● ●
3. Press the **A** button until all wash cycle LEDs will lit: ● ● ●
4. Press the **B** button to confirm this choice and initiate demo mode.
5. Close the door. Dishwasher will now be in demo mode.

During Demo Mode:

1. While on demo mode, the **Active** and **Regular Wash** LED will be illuminated.
2. To demonstrate what the display will look like at the end of a cycle, hold down the **D** Start/Reset button. The **Active** LED will then go OFF and the **Regular Wash** LED will stay ON.
3. After turning the dishwasher OFF and then back ON, demo mode will continue as described in 1.
Note: Rinse Aid LED will remain ON if you do not add Rinse Aid. This will not affect demo mode.

To Exit Demo Mode:

1. With the door open, hold down the **D** Start/Reset button for 3 seconds. The **Regular Wash** LED will stay ON and the **Clean** LED will be illuminated.
2. Press the **A** button and the **B** button at the same time.
3. Within 10 seconds, press the **C** On/Off button to turn the power OFF.
4. Press the **C** On/Off button to turn the power back ON. Dishwasher will no longer in demo mode.
5. Remove water from dishwasher tub with a wet-vac.

Models:	SHX3AR5_UC
	SHX3AR7_UC

Dishwasher Demo Mode Instructions

Ascenta® Series Models – Top Controls with Display Electrical and Water Demo Mode

Preparing for Demo Mode:

1. Plug dishwasher into outlet. Do NOT attach water inlet hose or disconnect any components, including the drain pump. Drain pump can be plugged-up with a stopper, though not required for demo mode.
2. Fill dishwasher by hand with approximately one gallon of water and a ½ capful of an antibacterial agent. (Example: Bacteriostat [used for humidifiers]. Do not use bactericide or bleach).

Note: If the dishwasher is filled with too much water, the water safety system will activate and drain the water until the dishwasher is empty.

3. Close door.

Note: If the dishwasher is filled with too much water, the water safety system will activate and drain the water until the dishwasher is empty.

To Enter Demo Mode:



1. Begin with the dishwasher turned OFF. If wash cycle has been started accidentally please press: OFF – ON – OFF.
2. With the door open. Press and hold down the **B** button and **C** button in unison.
3. While holding buttons **B** and **C** press the **On/Off** button once to turn the dishwasher ON. Then release buttons **B** and **C**.
4. Press the **B** button as many times as necessary to display code: **P 7**.
5. Press the **C** button to confirm this choice and to start the demo mode.
6. Close the door. Dishwasher will now be in demo mode.

During Demo Mode:

1. The display will always show **1:23** and the **Normal Wash** LED will be illuminated.
2. The main pump runs always as long as the door is closed and regardless if water is added or not.
3. After turning the dishwasher OFF and then back ON, demo mode will continue.
4. Also, you can open and close the door anytime in demo mode.
Note: Rinse Aid LED will remain ON if you do not add Rinse Aid. This will not affect demo mode.

To Exit Demo Mode:

1. Begin with dishwasher ON – with top control, door has to stay opened, with front control, door has to stay closed.
2. Press Start/Reset for 3 seconds. The display will then show **0:01** and the **Normal Wash** LED will turn off.
3. Press buttons **B** and **C** simultaneously once. The display will flash **0:01**.
4. Press the **On/Off** button to turn the power OFF within 10 seconds.
5. Press the **On/Off** button to turn the power back on. Dishwasher will no longer be in demo mode.


Models:	SHX4AT55UC	SHX4AT75UC
	SHX4ATF5UC	

Electric Cooktop Demo Mode Instructions

Benchmark™ and 800 Series Models

Preparing for Demo Mode:

To be fully operational, a cooktop requires 208/240V. The instructions below demonstrate how to connect the cooktop to a 110V plug. At 110V, the heating element will not function.

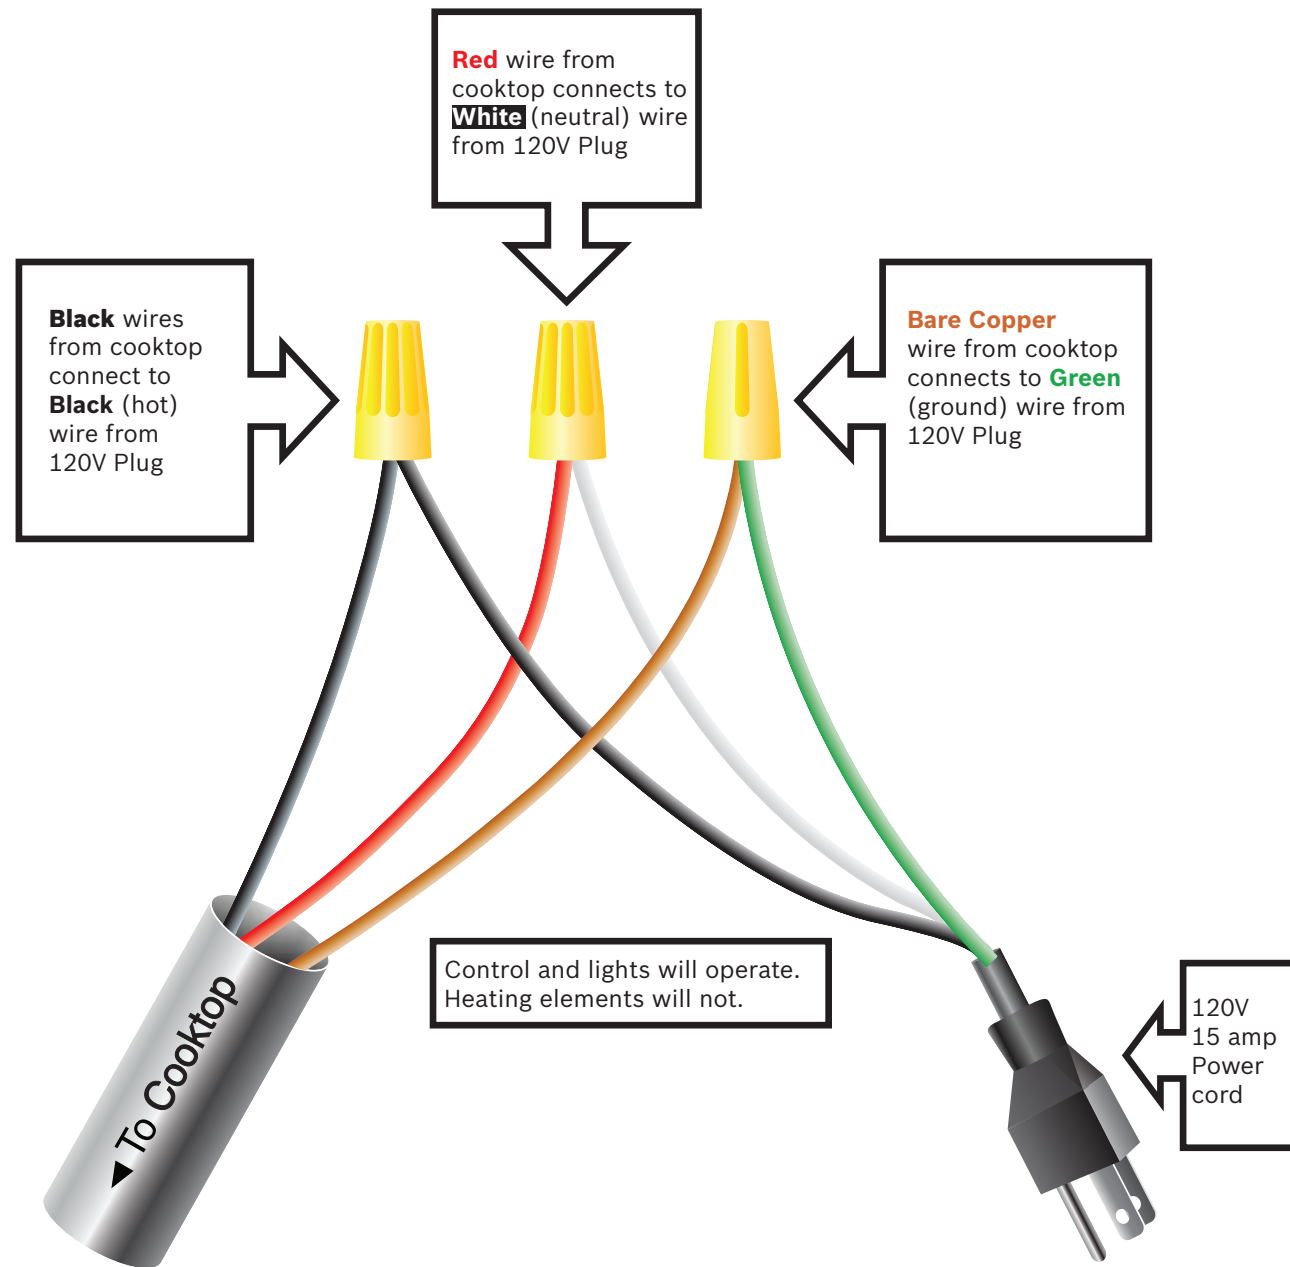

Electric Cooktop Demo Mode Instructions

Benchmark™ and 800 Series Models

To Enter Demo Mode:


Within the first 3 minutes after plugging the cooktop into the outlet, follow the steps below.

1. Press the **A On/Off button** to turn the cooktop on.
2. Press and hold the **B button** on the cooktop.
3. Press the **A On/Off button** to turn the cooktop off while still pressing the **B button** within 3 seconds.
4. After the cooktop has been turned off, release the **B button**.



During Demo Mode:

1. The panel lock symbol **🔒 (red key) C** will turn on indicating the cooktop is now in Demo mode. The elements will not turn on and it is safe to demonstrate the controls.

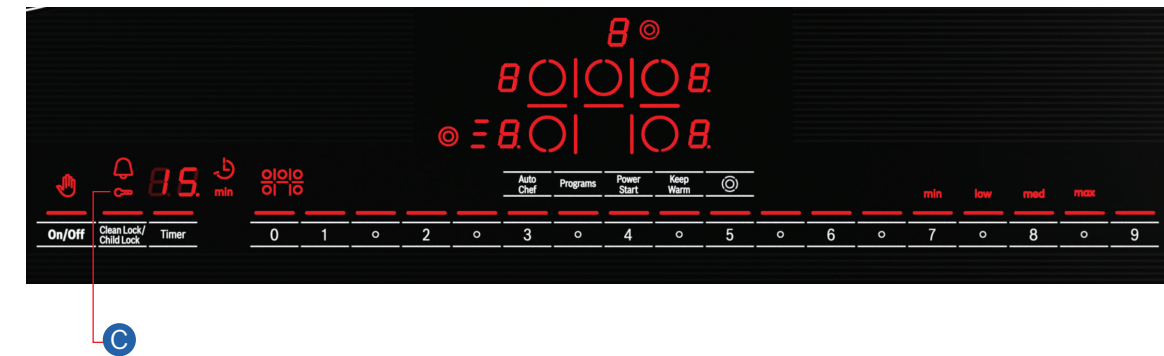

To Exit Demo Mode:

1. Within the first 3 minutes after plugging in the cooktop, repeat the above steps to return the unit to normal operation.


Models:	NET8066SUC	NET8066UC	NET8666SUC	NET8666UC	NETPO66SUC	NETP666SUC
---------	------------	-----------	------------	-----------	------------	------------

Wall Oven Demo Mode Instructions

Benchmark™ / 800 / 500 Series Wall Ovens

Although the wall ovens require 208/240V to be fully operational, it is possible to demonstrate some of the features by connecting the oven to a 120V plug/outlet. In this manner, the product can be demonstrated without actually cooking in the oven.

The oven should be connected to 120V (as illustrated) by a qualified technician or electrician. All connections should be inside a NEC approved junction box.

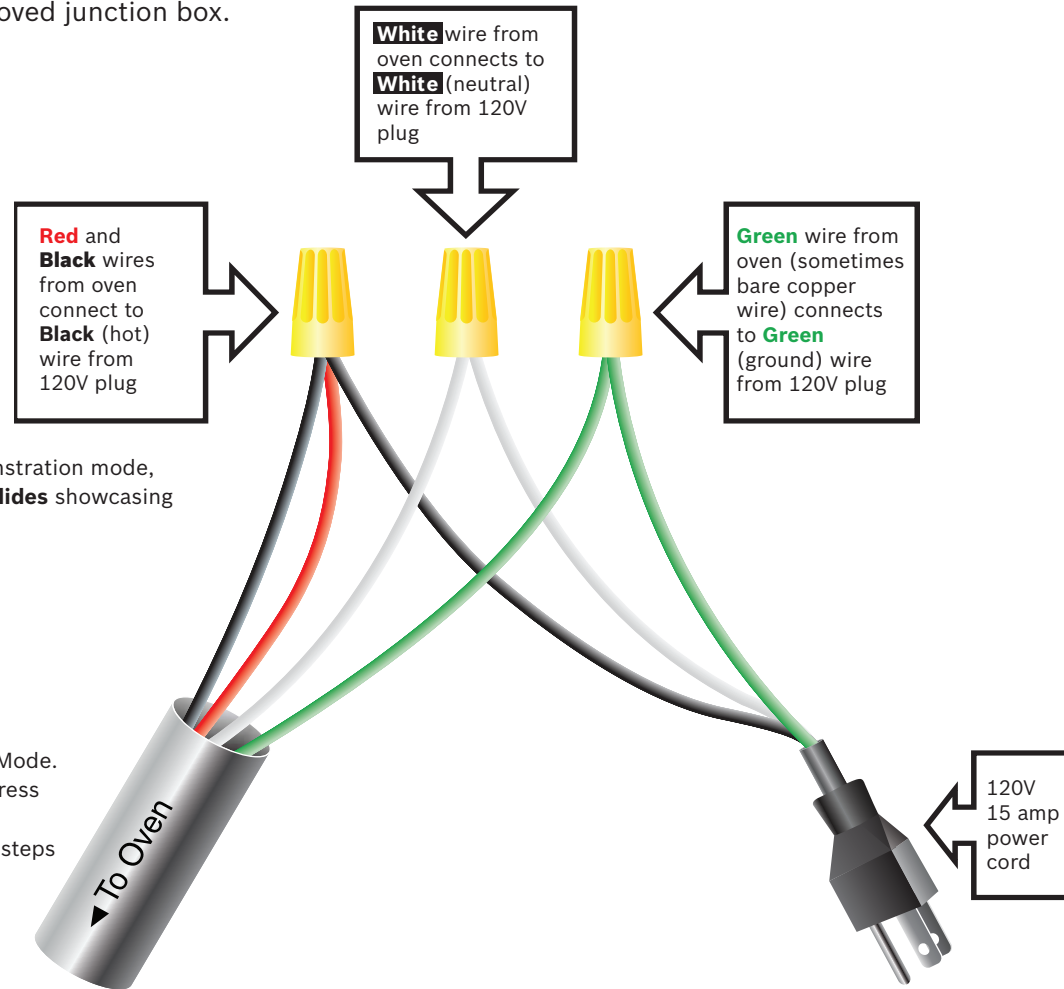

In the **Benchmark™** ovens in demonstration mode, the display will feature a series of **slides** showcasing the product **highlights**.

To activate the slide show:

1. Press Settings.
2. Follow the directions on the display screen and scroll through the menu options.
3. Highlight menu option 10 Demo Mode.
4. Change the setting to **On**, then press Enter to confirm.
(To turn Demo mode off, repeat steps 1 – 3, change the setting to **Off**, and press <Enter> to confirm.)

Comments (All Series)

- The display will work normally. Lights, fans, and latch motor will operate. The elements will not operate.
- The clock will be visible, but may not keep accurate time.
- Sabbath Mode 9p[ished through the settings menu.
- Combination ovens (Benchmark Series):
 - At 120V: The microwave needs to be disconnected from the oven, otherwise a 30A circuit is needed. The steam oven needs to be disconnected from the oven.
 - At 208/240V: The Demo Mode can be set for the steam oven and wall oven via settings menu. The speed microwave oven doesn't offer a Demo Mode and will be fully functional.
- Combination ovens (500/800 Series):
 - At 120V: The microwave needs to be disconnected from the oven, otherwise a 30A circuit is needed.
 - At 208/240V: No Demo Mode setting available.

Models:	HBL8463UC	HBN8451UC	HBL8453UC	HBL8661UC	HBN8651UC	HBL8651UC	HBL8753UC
	HBL5351UC	HBN5451UC	HBL5451UC	HBL5551UC	HBN5651UC	HBL5651UC	HBL5751UC
	HBLP451UC	HBLP451LUC	HBLP451RUC	HBLP651UC	HBE5453UC		
	HBLP651LUC	HBLP651RUC	HBLP751UC	HSLP751UC			

Note: BSH19DMKIT range and oven demo mode electrical connection cord kit also available to order. Use this kit only with Thermador and Bosch oven and range products not provided with a cord from the factory.

Steam Convection Oven Demo Mode Instructions

Steam Convection Oven

The steam convection oven features a one of a kind Demo Mode setting, which can be utilized to demonstrate product features without actually cooking in the oven. While in a passive state, the display will feature a series of **slides** showcasing the product **highlights**. If any button is pressed, the control panel appears to work as normal for the pressed button, but the oven will not heat up, preheat will never end, self clean will not start, etc. After 30 seconds without a key press, the display will resume the slide show.

IMPORTANT:
The Steam oven must be set in Demo Mode "ON" via settings menu, otherwise the elements will get warm.

To activate Demo Mode:

1. Press Settings.
2. Follow the directions on the display screen and scroll through the menu options.
3. Highlight the Demo Mode menu option.
4. Change the setting to **On**, then press **Enter** to confirm.
(To turn Demo mode off, repeat steps 1–3, change the setting to **Off**, and press **Enter** to confirm.)

Comments

It is not possible to demonstrate the features of the steam convection oven unless connected to 208/240V as described in the *Installation Instructions*.

Models:	HSLP451UC	
	HSLP751UC	(only when combo is hooked up to 208/240V)


Slide-in Range Demo Mode Instructions

Slide-in Range

Although the Slide-in Ranges require 208/240V to be fully operational, it is possible to demonstrate some of the features by connecting the range to a 120V plug/outlet. In this manner, the product can be demonstrated without actually cooking in the oven.

Instructions:

1. Remove the wiring access panel.
2. Remove the grounding strap between the center terminal lug and the green screw (discard strap only).
3. Connect the green wire from the power cord to the chassis via the green screw.
4. Connect the white wire from the power cord to the center terminal lug.
5. Create a wire jumper to bridge the red and black terminal (minimum 18 awg wire).
6. Connect the black wire from the power cord to the black terminal lug.

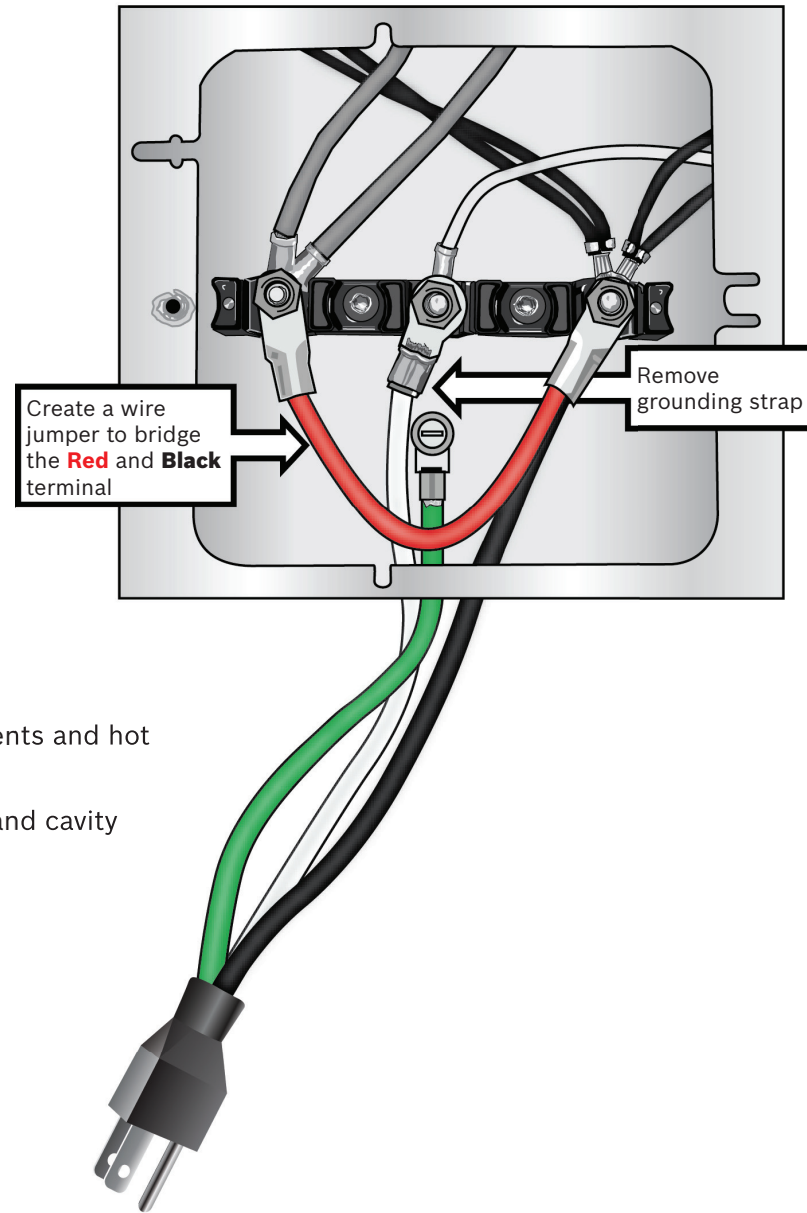

Comments

- With this setup, the cooktop cooking elements and hot indicator lights will not operate.
- The oven user interface, fans, latch motor and cavity lighting will operate.
- The warming drawer will operate.
- The warming zone (on electric cooktop) will operate.
- The clock will be visible, but may not keep accurate time.
- Sabbath Mode can be demonstrated.

Models:	HEI8054U	HEIP054U	HDIP054U	HDI8054U
	HIP054U			

Drawer Microwave Demo Mode Instructions

800 Series Model - HMD8451UC

To Enter Demo Mode:

1. Touch settings pad 5 times; the display will show:



2. Hold Start (+1 min) pad for 3 seconds; the display will show:



To Cancel Demo Mode:

1. Touch settings pad five times; the display will show:



2. Touch Start (+1 min) pad; the display will show:





Note:


- Drawer Microwave doesn't heat in Demo Mode.
- Display counts down quickly.

Refrigeration Demo Mode Instructions

Side-by-Side 800 Series and 500 Series Models

To Enter Demo Mode:

1. Turn the refrigerator on.
2. Hold the **A**  **Super/quick ice** and the **B**  **buttons** simultaneously.
3. The freezer display will show 88 for 3 seconds. When 88 is displayed, release the buttons.

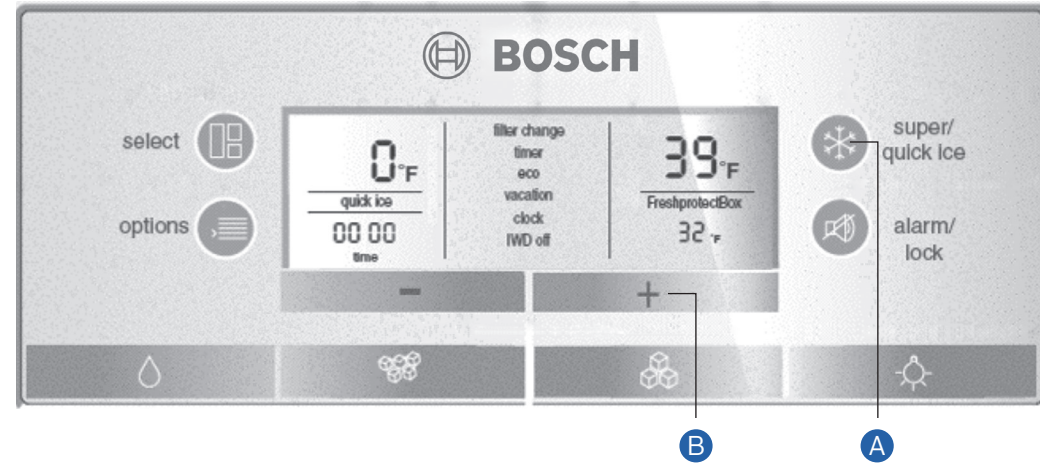

During Demo Mode:

1. Display functions can be demonstrated.
2. Ventilator and interior light are active.
3. All other components are not active.

To Exit Demo Mode:

1. Turn off refrigerator.

Models: B22CS80SNS B22CS50SNS B22CS50SNB B22CS50SNW

Refrigeration Demo Mode Instructions

Side-by-Side 300 Series Model

To Enter Demo Mode:

1. Turn the refrigerator on.
2. Hold down the **A**  **Fridge button** and **B**  **Alarm off/ lock button**.
3. The freezer display will show 88 for 3 seconds. When 88 is displayed, release the buttons.



During Demo Mode:

1. Display functions can be demonstrated.
2. Ventilator and interior light are active.
3. All other components are not active.

To Exit Demo Mode:

1. Turn off refrigerator.

Model: B22CS30SNS

Refrigeration Demo Mode Instructions

500 Series Model - 24" Counter Depth Bottom-Freezer

To Enter Demo Mode:

TOP display operating module electronic has a special program Showroom Mode.


In Showroom Mode, no loads are activated, except the fan that is switched on for 30s after the door has been closed. If door contacts are found defective, no loads are switched on.

The Showroom Mode is activated by touching the alarm button on the display operating module for 10 seconds within 10 seconds after switching on the appliance. After 10 seconds, a second tone sounds (hint to release the alarm button) and 5 beeps will be audible, signifying that unit is now in demo mode.

To Exit Demo Mode:

The appliance must be switched off in order to leave Showroom Mode.

Models B11CB50SSS

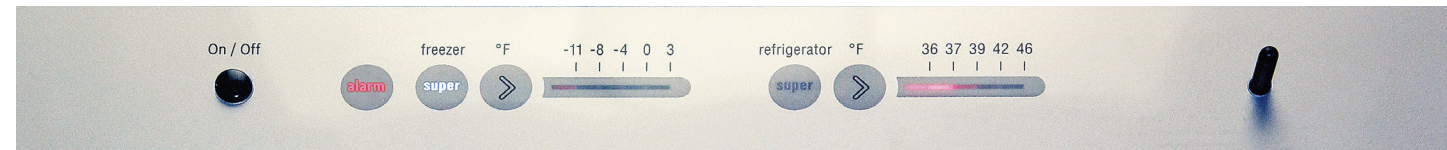

Refrigeration Demo Mode Instructions

33" Standard Depth and 36" Counter-Depth French Door Refrigerator

To Enter Demo Mode:

1. Press and Hold **A Door Alarm / Alarm**.
2. Wait 1 second while holding **A Door Alarm / Alarm**, then press and hold **B Freezer temperature "+"** button.
3. Release **A Door Alarm / Alarm**, but continue holding **B Freezer temperature "+"** button.
At this point if everything has been done correctly you should see "SH" on the Freezer temperature display and nothing on the refrigerator display.

S ■■■■■

4. To confirm that you would like to enter the menu to select the demo mode state, press **B Freezer temperature "+"** one more time.

Now you should see "SH" on the left display, and "On" or "Off" on the right display.

S ■■■ FF

5. Press **C Refrigerator temperature "+"** or "-" to toggle selection of "On" and "Off".

S ■■■■■


6. To save your selection, press and hold the **B Freezer temperature "+"** key, until both displays begin to flash.
7. Finally, to exit the menu press and hold **A Door Alarm / Alarm**. The display will return to displaying temperature.

During Demo Mode:

1. The cooling and heater functions are disabled, but the UI display, LED, buttons and compartments lights will work normally.
2. If either the fresh food or freezer door is open for longer than 10 minutes, the interior lights will turn off as defined in Door Alarm mode.

To Exit Demo Mode:

1. To exit this mode, follow the "Enter Demo Mode" procedures and select "Off" (step 5) then save the mode.
2. Any power loss will also cause the control to exit this mode.

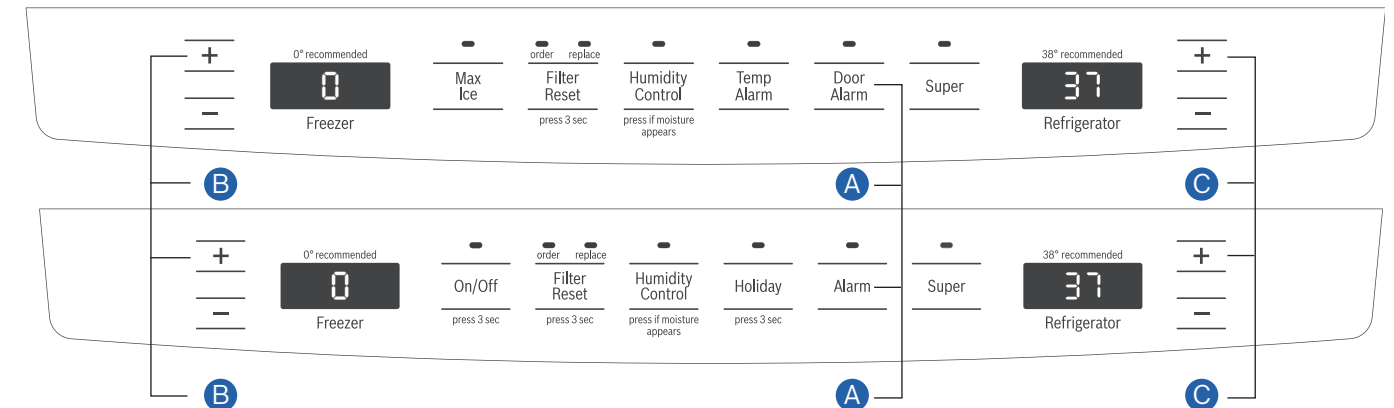

Models B22FT80SNS B22CT80SNP B22CT80SNS


Refrigeration Demo Mode Instructions

For units before 2013

Built-In Bottom Freezer

To Enter Demo Mode:

1. Press the **A On/Off button** to turn unit off.
2. Press the **A On/Off button** to turn unit on.
3. Within 30 seconds of starting the unit press the **B Setup button** and the **C Cool button** simultaneously until the word DEMO on the **D** display is shown.

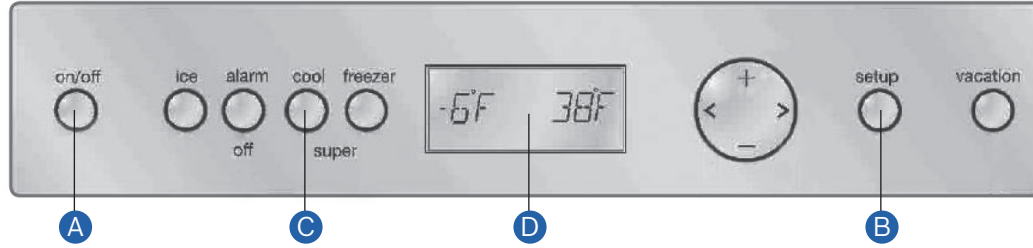

During Demo Mode:

1. Display functions can be demonstrated.
2. Ventilator and interior light are active.
3. All other components are not active.

To Exit Demo Mode:

1. Press the **A On/Off button** to turn unit off.

Models	B36BT830NS	B30IB800SP
	B30BB830SS	


Refrigeration Demo Mode Instructions

For units after 2013

Built-In Bottom Freezer

To Enter Demo Mode:

1. Press the **A On/Off button** to turn unit off.
2. Press the **A On/Off button** to turn unit on.
3. Within 30 seconds of starting the unit press the **B Setup button** and the **C Cool button** simultaneously until the word DEMO on the **D** display is shown.

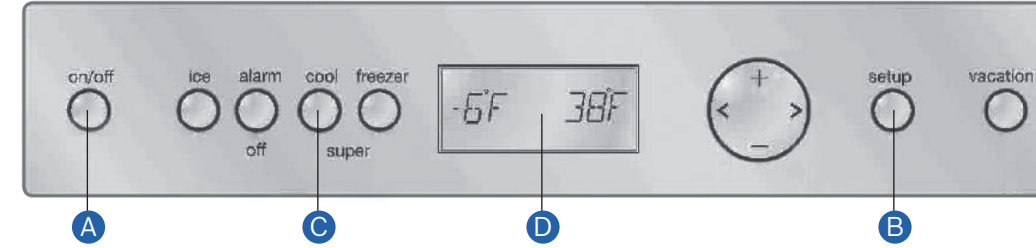

During Demo Mode:

1. Display functions can be demonstrated.
2. Ventilator and interior light are active.
3. All other components are not active.

To Exit Demo Mode:

1. Press the **B Setup button** and the **C Cool button** simultaneously until the word DEMO is replaced with temperature reading. As shown **D**

Models	B36BT830NS	B30IB800SP
	B30BB830SS	



BOSCH

Invented for life

Bosch Home Appliances
1901 Main Street, Suite 600
Irvine, CA 92614
1.800.944.2904
www.bosch-home.com/us (U.S.)
www.bosch-home.ca (Canada)