BOSCH

Sabbath Mode Guide – Built-in Ovens

To accommodate particular faiths, Sabbath Mode has been developed to meet their requirements for limited use on the Sabbath in the following ways:

• audible tones are disabled   • electronic displays remain static   • oven runtime can be set up to 74 hours
• lights remain on/off based on their status when the mode was set

Benchmark® Wall Ovens

1. Select *BAKE* from control panel

2. Set the oven temperature and press *ENTER*

3. Press/hold *OVEN TIMER* for 5 seconds, display will shift to Sabbath Mode options

4. Enter the duration of Sabbath Mode in the format HH:MM and press *ENTER* (unless delay is desired);
   Sabbath function will begin immediately

5. *(Optional)* If delay is desired, press *SABBATH DELAY*, and enter the delay time, then press *ENTER*; Sabbath mode will begin after delay countdown ends

• Temperature can be set between 100°F—425°F

• Only the lower (hidden) element is used

• Oven temperature may be changed by entering a new temperature followed by *ENTER* (there is no visual or audible response and a 30 second delay ensues)

• The *Holiday* function allows for pre-programed temperature change to be used when allowed

Double Oven Notes:

• In Double Ovens, both ovens can operate in Sabbath mode individually or simultaneously
  * To set this, after steps 1 & 2 above, select the other oven—upper or lower— and repeat steps 1 & 2 to set second oven before moving to step 3
• To adjust oven temperature on double ovens, first select the appropriate oven button (Upper or Lower), then input the new temperature and followed by *ENTER* (there is no visual or audible response and a 30 second delay ensues)

800 Series Wall Ovens

1. Select *BAKE* from control panel

2. Set the oven temperature and press *ENTER*

3. Press/hold *OVEN TIMER* button for 5 seconds

4. Timer will blink, enter the desired time for Sabbath to run in the format HH:MM and press *ENTER* (if idle for 5 seconds, the default 74 hour limit will begin); Sabbath function will begin immediately

• Temperature can be set between 100°F—425°F

• Only the lower (hidden) element is used

• Oven temperature may be changed (there is no visual or audible response and a 30 second delay ensues)

Double Oven Notes:

• In Double Ovens, both ovens can operate in Sabbath mode individually or simultaneously
  * To set this, after steps 1 & 2 above, select the other oven—upper or lower— and repeat steps 1 & 2 to set second oven before moving to step 3
• To adjust oven temperature on double ovens, first select the appropriate oven button (Upper or Lower), then input the new temperature and followed by *ENTER* (there is no visual or audible response and a 30 second delay ensues)

500 Series Wall Ovens

1. Turn cooking mode dial to *BAKE*

2. Turn temperature dial to desired oven temperature

3. Press/hold *TIMER* button for 3 seconds

4. "SAb" will display and timer will blink; use the "+" and "-" buttons to change the run time by 30 minute increments (if idle for 3 seconds it will default to 74 hours)

5. Press *TIMER* to save entry (if idle for 3 seconds, entry will save) and Sabbath function will begin immediately

- Temperature can be set between 100°F—450°F

- Only the lower (hidden) element is used

- In Double Ovens, both ovens can operate in Sabbath mode individually or simultaneously *(repeat steps 1 & 2 to set second oven before moving to step 3)*

[Click here to download Use & Care for 500 Series Wall Ovens](#)

---

500 Series Warming Drawer

[Click here to download Use & Care for 500 Series Warming Drawer](#)

1. Press/hold *MED* for 5 seconds

2. Panel will display "SAb" and Sabbath function will begin immediately

- Temperature can be set to Medium level at 165°F

- Warming drawer will run for 74 hours unless manually cleared and turned off

---

For additional information regarding Sabbath requirements and practices, as well as a comprehensive list of the exact appliances that have received Star-K certification, visit www.star-k.org
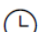
BOSCH

BOSCH

Sabbath Mode Guide – Ranges

To accommodate particular faiths, Sabbath Mode has been developed to meet their requirements for limited use on the Sabbath in the following ways:

• *audible tones are disabled*   • *electronic displays remain static*   • *oven runtime can be set up to 74 hours*

Industrial Style Ranges – *Dual Fuel*

1. Turn the function knob to *BAKE* panel

2. Press 🔑 four times

   appears in the display and remains on while Sabbath mode is engaged

3. Set the temperature with the ➕ or ➖ buttons

4. Press 🔑

5. Set the runtime duration with ➕ or ➖ *(defaults to 72 hours)*

6. Press 🕐 Sabbath mode begins immediately.

- Sabbath function must be activated in the Basic Settings -- *refer to Use & Care Guide for process*

- Temperature can be set between 100ºF—450ºF

- Maximum runtime is 72 hours

- Oven light remains off

- Turn the function knob to *OFF* to cancel or end Sabbath mode

- *Sabbath mode is not available on Industrial Style Gas ranges*

[Click here to download Use & Care for Industrial Style Ranges (DF)](#)

Slide In Ranges

[Click here to download Use & Care for Slide In Ranges](#)

1. Select *BAKE* from control panel

2. Set the oven temperature and press *ENTER*

3. Press/hold *OVEN TIMER* for 5 seconds

4. Timer will blink, enter the desired time for Sabbath to run in the format HH:MM and press *ENTER* *(if idle for 10 seconds, the default 74 hour limit will begin);* Sabbath function will begin immediately

- Temperature can be set between 100ºF—450ºF

- Oven temperature may be changed while in Sabbath mode by pressing *BAKE*, entering the new temperature, and pressing *ENTER* *(there is no visual or audible response and a randomized delay ensues)*

- Lights remain on/off based on their status when the mode was set

- *Sabbath mode is not available for warming drawer in range*

For additional information regarding Sabbath requirements and practices, as well as a comprehensive list of the exact appliances that have received Star-K certification, visit www.star-k.org

BOSCH